

1. Switch power switch on all modules. Allow a 20-second period before using system to allow the system to reach operating levels. Red indicating lights will show power is on.
2. Time Setting
 - 2.1 Press T – “C” will appear on the display
 - 2.2 To select time e.g. 7:45 – Press 7, 4 and 5
 - 2.3 Press “Sel” – The correct time has been selected
 - 2.4 To reset time - press “T”
3. All Call – A.C (All Loudspeakers In System)
 - 3.1 Press “AC” – A appears on the display
 - 3.2 Press “Sel” – for selection of call
 - 3.3 To talk - Press the Talk button while speaking
 - 3.4 In order to end communication – Press “CLR”
4. Group Call – G.C. (All Loudspeakers In Specific Group)
 - 4.1 Press the required number (see call code list)
 - 4.2 Press “GC”
 - 4.3 Press “Sel”
 - 4.4 To talk – see paragraphs 3.3 and 3.4
5. Individual Call
 - 5.1 Press number required
 - 5.2 Press “Sel” for selection of call
 - 5.3 To Talk – Press the Talk button while speaking
 - 5.4 Release button to listen
 - 5.5 Press “CLR” button when conversation has been completed

NOTE: System will clear automatically after 35 seconds
6. Multiple Call
 - 6.1 Press the first number required
 - 6.2 Press “+”
 - 6.3 Select the next number
 - 6.4 Press “+”
 - 6.5 Press “Sel”
 - 6.6 To talk – see paragraphs 3.3 and 3.4

NB

 1. NO TALK BACK UNDER ITEMS 3, 4 AND 6
 2. If a number has been selected in error and “Sel” has not been pressed yet, the correct number can still be selected – “E” will show on the display.

7. Call Back (Where Applicable)
 - 7.1 This is where an individual room can call the master station/s. The caller's number will flash simultaneously with a tone to indicate which specific number has called.
 - 7.2 Press "Sel" in order to answer the call and two-way communication can take place as in paragraphs 3.3 and 3.4.

8. An announcement tone will sound once the selected number is connected to the individual call which will allow two-way communication.